

TABLE OF CONTENTS



Biography	5	Brake Force and Corner Weight	37
Acknowledgments	5	Perfect Balance	38
Dedication	6	Static Weight Distribution	39
Foreword	6	The Second Law of Motion	39
Introduction	7	Dynamic Weight Distribution	40
Chapter 1: Energy Conversion	9	The Benefits of Perfect Balance	41
The Conservation of Energy	9	Front Brake Bias	43
Where Energy Comes From	10	Rear Brake Bias	43
Friction	10	Measuring Brake Balance	44
Kinetic Energy	11	Changing Brake Balance	44
Potential Energy	13	Chapter 5: Pedals, Boosters	
Energy Transformation	14	and Master Cylinders	46
Energy and the Brake System	14	Brake Pedal Components	46
Calculating Brake System Temperature	15	OEM Brake Pedals	47
Importance of Brake Sizing	15	Racing Brake Pedals	48
Chapter 2: Tires Stop the Car	18	Brake Boosters	48
The First Law of Motion	18	Vacuum Boosters	48
Brake Forces	18	Hydraulic Boosters	50
Tire Slip	19	Master Cylinders	50
How Brake Forces are Generated	20	Master Cylinder Selection	52
The Mu-Slip Curve	22	Rear Brake Pressure Reduction	54
Choosing the Best Tires	24	Balance Bars	54
Calculating Maximum Deceleration	25	Proportioning Valves	55
Chapter 3: Brake System Design	27	Chapter 6: Brake Fluid	58
Driver Applied Force	27	Brake Fluid 101	58
Brake System Overview	28	FMVSS116	58
Brake Corner Gain	33	Dry Boiling Point	60
Summing Forces	34	Wet Boiling Point	61
Overall Brake System Gain	34	Water Adsorption	61
Calculating Deceleration	34	DOT Ratings	61
Calculating Stopping Distance	34	Brake Fluid Compatibility	64
Brake System Modifications	35	Brake Fluid Maintenance	64
Chapter 4: Brake Balance	37	Brake Bleeding	65
		Chapter 7: Brake Lines and Hoses	69

TABLE OF CONTENTS



Hydraulic Circuit Design	69		
Brake Lines	70		
Flare Fittings	70		
Brake Hoses	71		
Banjo Fittings	72		
Stainless Steel Brake Hoses	73		
Chapter 8: Brake Calipers	76	Chapter 11: Sports Car Brake Upgrade	118
Hydraulic Gain	76	The Vehicle	119
Caliper Components	76	The Objective	119
Taper Wear	79	Picking the Right Parts	119
Piston Count	81	Bolting Them On	121
Caliper Mounting	82	The Results	124
One-Piece (Monoblock) Calipers	84		
Two-Piece Calipers	84	Chapter 12: Racecar Brake Upgrade	126
Knockback	84	The Vehicle	127
		The Objective	127
Chapter 9: Brake Pads	88	Front Brake Upgrade	127
Brake Pad Terminology	88	Rear Brake Upgrade	129
Coefficient of Friction	90	Apply System Upgrade	131
Coefficient of Friction Stability	91	Hoses, Fluids, and Pads	132
Brake Pad Fade	91	The Results	132
Friction Material Categories	92		
Friction Material Chemistries	93	Chapter 13: Muscle Car Brake Upgrade	133
Friction Mechanisms	96	The Vehicle	133
Brake System Break-In	97	The Objective	134
		Drum Brakes 101	134
Chapter 10: Brake Rotors	100	Picking The Right Parts	134
A Rotor Refresher	100	Bolting Them On	135
Rotor Terminology	101	Buttoning it Up	138
Effective Radius	103	The Results	138
Rotor Sizing	103		
Static Weight and Rotational Inertia	103	Chapter 14: Hot Rod Brake Upgrade	139
Rotor Cooling	104	The Vehicle	139
One-Piece (Fixed) Rotors	107	The Objective	139
Two-Piece (Floating) Rotors	107	Front Brake Upgrade	139
Solid Rotors	109	Brake Pedal Considerations	140
Vented Rotors	110	Master Cylinder Upgrade	142
Cross-Drilled Rotors	111	Brake Line and Proportioning	
Slotted Rotors	112	Valve Installation	142
Rotor Inspection	113	Brake Hoses	143
Thickness Variation	115	Brake Fluid Selection	143
		Parking Brake Installation	144
		The Results	144



BRAKE BALANCE

One of the most critical, yet least understood, brake system attributes is brake system balance. This single design parameter can make or break (no pun intended) a vehicle's stopping distance performance. Even with the very best brake system components installed on your vehicle, improper brake system balance can prevent the tires from operating at their maximum decelerations simultaneously, resulting in vehicle deceleration performance that is far from optimized.

Improper brake system balance can also create undesirable vehicle dynamic responses. From a premature loss of vehicle steering during braking to dynamic instability while braking in a turn, the ramifications of improper balance can extend far beyond a few additional feet of stopping distance.

Unfortunately for the automotive enthusiast, screwing up a vehicle's brake balance is pretty darn easy to do. Later in this chapter you'll be presented with a table of those factors that can influence brake balance, but let it suffice to say that just about anything and everything brake related, suspension related, and tire related can have an effect (both positive *and* negative) on brake balance.

A vehicle with a balanced brake system creates brake forces at all four tires simultaneously that are equal to the maximum forces that each tire can sustain independently. You could also say that a balanced brake system is one that brings all four tires to their independent maximum coefficients of friction at the same time. In either case, defining perfect brake balance is quite a bit easier than designing a system that can pull it off.

Brake Force and Corner Weight

In Chapter 2 you learned that the maximum brake force a particular tire can generate is equal to the coefficient of friction of the tire-road interface (μ in the equation below) multiplied by the amount of weight being supported by that corner of the car:

$$\text{Brake force at one tire (lb)} = \text{corner weight (lb)} \times \mu \text{ (unitless)}$$


To use real numbers, a single tire supporting 500 pounds of the total vehicle weight with a peak coefficient of friction of 0.9 (a typical value for an all-season tire on a dry asphalt road) could generate, in theory, a maximum of 450 pounds of braking force. Recall that this also would result in



Even with the very best brake system components, improper brake balance can wreak havoc on vehicle braking dynamics. Stopping distance certainly can suffer as well. (Wayne Flynn/pdxsports.com)



Tires generate brake forces through adhesive, deformation, and mechanical wearing modes of operation. Based on the surface, condition, and level of slip, a tire may be operating in one, two, or all three modes simultaneously. Tire smoke usually indicates too much mechanical wearing! (The Tire Rack)

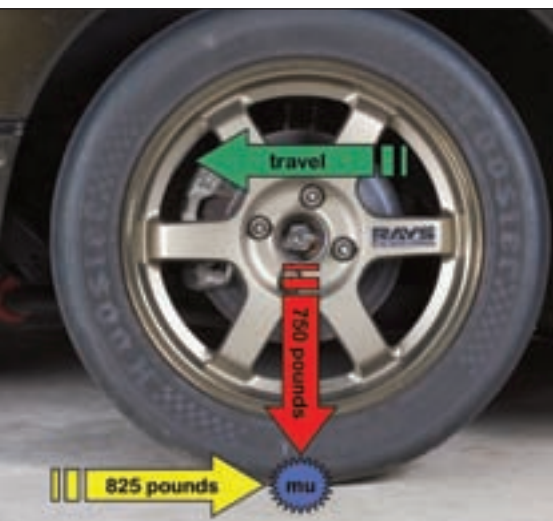

In this example, a single tire is supporting 750 pounds of vehicle weight (red arrow) with a peak coefficient of friction, or μ , of 1.1 (blue star). Therefore, this tire could generate, in theory, a maximum of 825 pounds of braking force (yellow arrow). The brake force would oppose the direction of travel (green arrow). (Randall Shafer)

a maximum deceleration contribution of 0.9g at that one wheel.

Now if you were to place an additional 200 pounds on the same tire (700 pounds total), the maximum brake force rises to 630 pounds (this assumes that the peak coefficient of friction remains at 0.9). From this calculation you can see that an increase in maximum brake force does not result in higher deceleration (still 0.9g in this case). Why? Because the tire has more weight on it, and that additional weight requires its own additional force to decelerate.

Based on this relationship, you can also predict that reducing the weight on the tire reduces the maximum brake force sustainable by that corner. In the example above, if the weight were reduced to 300 pounds, a maximum of only 270 pounds of brake force would be available at that corner (again, assuming the same coefficient of friction).

Perfect Balance

From all of these equations, ideal brake balance can be boiled down to one simple relationship. For perfect brake balance under all conditions:

Real-Life Brake Balance Success Story

How big of an impact can brake balance have on vehicle performance? It varies by application, but even with the very best brake system components, super sticky tires, and impeccable installation, skewing your brake balance can lengthen stopping distances dramatically. So much for those fancy red calipers...

To illustrate this point, here is a real-life brake balance success story reproduced with permission from *Grassroots Motorsports* during their Porsche 914-4 restoration.

"Our initial stopping distance measurements were not quite world-class. Even though we had installed Yokohama AVS Intermediate 195/60ZR15s at all four corners, we were recording stopping distances of 150 to 160 feet from 60 mph. There was obviously room for improvement.

"We then began to slowly adjust the proportioning valve until we were just barely on the verge of rear lock-up. We dialed back a tiny bit for a safety factor and again ran our stopping distance tests. Note that if you are doing this at home, you should be prepared just in case you go a bit too far and need to deal with the back end of the car getting all out of shape. A large parking lot or airstrip (as opposed to a crowded four-lane highway) is really the best place for this sort of thing.

"As stated earlier, the adjustable proportioning valve is a must-have item for anyone performing a 914-4 caliper swap. Our new stopping distance from 60 mph was now a scant 121 feet—on par with many of today's premier sports cars. Apparently the brake bias was significantly holding us back from optimizing our new components."



Paying attention to brake balance can pay huge dividends at the track. The 60 mph stopping distance of the Porsche 914-4 shown here went from 160 feet to 121 feet simply by setting the brake proportioning valve to an optimum position. (David S. Wallens/Classic Motorsports)

In this particular application, the stopping distance from 60 mph was reduced by approximately 34 feet—a whopping 22 percent! If you consider that out-braking your opponent by just two feet every lap for a twenty lap sprint race can result in a three to four car-length advantage at the checkered flag, a 22-percent decrease in stopping distance in every braking zone is sure to get everyone's attention.